Temperature Transmitter Selection Table



	DAGIO.								CMART	
	BASIC				UNIVERSAL			SMART		
	APAQ C130 [™] APAQ R130 [™]	APAQ C130 ^{RTD} APAQ R130 ^{RTD}	IPAQ C202	IPAQ C310RTD	MinIPAQ C230 MinIPAQ R230	IPAQ C330 IPAQ R330	IPAQ R460	IPAQ C530 IPAQ R530	IPAQ C520 IPAQ R520	
							To the second se			
Туре										
In-head transmitter	Ø	Ø	⊘	Ø	Ø	Ø	-	Ø	Ø	
Rail transmitter	Ø	Ø	-	-	Ø	Ø	Ø	Ø	⊘	
Output / Power Supply connnection	2-wire transmitter	2-wire transmitter	2-wire transmitter	2-wire transmitter	2-wire transmitter	2-wire transmitter	4-wire transmitter	2-wire transmitter	2-wire transmitter	
Available Certificates										
Ex Certification / Intrinsically safe	-	_	ATEX, IECEx (In-head)	-	-	ATEX, IECEx, cFMus	-	ATEX, IECEx, cFMus	ATEX, IECEx	
Functional safety	-	-	-	-	-	-	-	-	SIL 2	
Input										
Resistance thermometer	-	2-, 3- or 4-wire	3-wire	2-, 3- or 4-wire	2-, 3- or 4-wire	2-, 3- or 4-wire	2-, 3- or 4-wire	2-, 3- or 4-wire	2-, 3- or 4-wire	
Thermocouple	B, E, J, K, N, R, S, T	-	-	-	B,C,D,E,J,K,N,R,S,T	B,C,D,E,J,K,N,R,S,T	B,C,E,J,K,L,N,R,S,T,U	B,C,D,E,J,K,N,R,S,T	B,C,D,E,J,K,N,R,S,T	
Other input types	-	-	-	Ω	-	mV, Ω	mV, Ω, KTY	mV, Ω	mV, Ω	
Input / Channel					•					
1 input channel	⊘	Ø	⊘	Ø	Ø	Ø	⊘	②	Ø	
2 input channel	-	-	-	-	-	-	-	-	Ø	
Output										
4-20 mA	②	Ø	⊘	②	⊘	⊘	②	⊘	Ø	
0-10 V	-	-	-	-	-	-	②	-	-	
HART®	-	-	-	-	-	-	-	⊘	Ø	
Accuracy										
Typical Accuracy	±0.2%	±0.15%	±0.1%	±0.1%	±0.15%	±0.08%	±0,1%	±0.08%	±0.05%	
Electrical separation										
Galvanic isolation	-	_	-	1500 VAC	-	1500 VAC	3000 VAC	1500 VAC	1500 VAC	
Power Supply										
24 VDC (Loop Power Supply)	⊘	Ø	⊘	②	⊘	Ø	_	⊘	Ø	
24 VDC (Separate Power Supply)	-	-	-	_	-	-	②	-	-	
Configuration										
PC software ConSoft (USB)	-	_	Ø	Ø	Ø	Ø	-	Ø	⊘	
HART®	-	-	-	-	-	-	-	Ø	Ø	
NFC™	②	Ø	-	Ø	Ø	Ø	-	Ø	-	
Bluetooth®	-	-	-	⊘	Ø	Ø	-	②	-	
DIP-Switch / PC software INOR-Set (USB)	-	-	-	-	-	-	Ø	-	-	
Accessories										
Configuration kit ICON-X 1)	_	_	⊘	Ø	Ø	Ø	-	⊘	Ø	
Configuration kit ICON-BT 2) / INOR-Set 3)	_	-	-	ICON-BT	ICON-BT	ICON-BT	INOR-Set	ICON-BT	-	
App INOR Connect 4)	②	Ø	-	Ø	Ø	Ø	-	Ø	_	

1) ICON-X is a configuration tool provided by INOR to configure most temperature transmitters. The communication with the connected transmitter is automatically established with the ConSoft software. ICON-X also has built-in protection for Ex-certified transmitters.



2) ICON-BT, offers a possibility to configure and monitor transmitters. Connect your smartphone/tablet via Bluetooth to the transmitter and configure it via the INOR Connect app. 3) INOR-Set is an USB-Interface for connecting the transmitter to a PC and configure with PC software INOR-Set.



4) Mobile app for wireless configuration of the transmitter series APAQ 130, IPAQ C310RTD, IPAQ 330 and IPAQ 530 via NFC. Just download INOR Connect.









